



14. Parts list

Item	Denomination	Quantity
1	Barrel	1
2	Frame	1
Assy A	Magazine release assembly	1
3	* Magazine release	1
4	* Magazine release rest	1
5	* Magazine release spring	1
Assy B	Multifunction element with ejector	1
6	* Multifunction element	1
8	* Ejector	1
9	* Ejector/drop safety lever	2
7	Disassembly lever	1
10	Catch	1
11	Lever	1
12	Catch spring	1
13	Lever spring	1
14	Catch pin	1
15	Lever pin	1
Assy C	Trigger bar assembly	1
16	* Trigger bar	1
17	* Trigger	1
18	* Trigger safety	1
19	* Trigger safety spring	1
20	* Trigger spring	1
21	* Trigger bar pin	1
22	* Trigger pin	1

Item	Denomination	Quantity
Assy D	Key lock assembly	1
23	* Key lock	
24	* Key lock spring	
Assy E	Manual safety assembly	
25	* Manual safety	
26	* Manual safety rod	
27	* Manual safety lever	
28	* Manual safety spring	
29	*Manual safety pin	
30	Slide catch	
31	Slide catch spring	
32	Drop safety	
33	Slide (with loaded chamber indicator assy. Opt.)	
34	Front sight	
35	Rear sight	
Assy F	Loaded chamber indicator	
36	* Loaded chamber indicator	
37	* Retaining washer	
38	* Sprng loaded chamber indicator	

Item	Denomination	Quantity
Assy G	Extractor assembly	1
39	* Extractor	1
40	* Extractor pin	1
41	* Extractor spring	2
42	Slide plate	1
43	Firing pin	1
44	Firing pin spring guide	1
45	Firing pin spring washer	1
46	Firing pin spring	1
Assy H	Recoil spring assembly	1
47	* Recoil spring guide	1
48	* Recoil spring	1
Assy I	Slide plate pin assembly	1
49	* Slide plate pin	1
41	* Slide plate spring	1
50	Key	2
52	Magazine	1
53	Bearing	1

All parts marked with * are part of the assembly above and not available as a single spare part.